

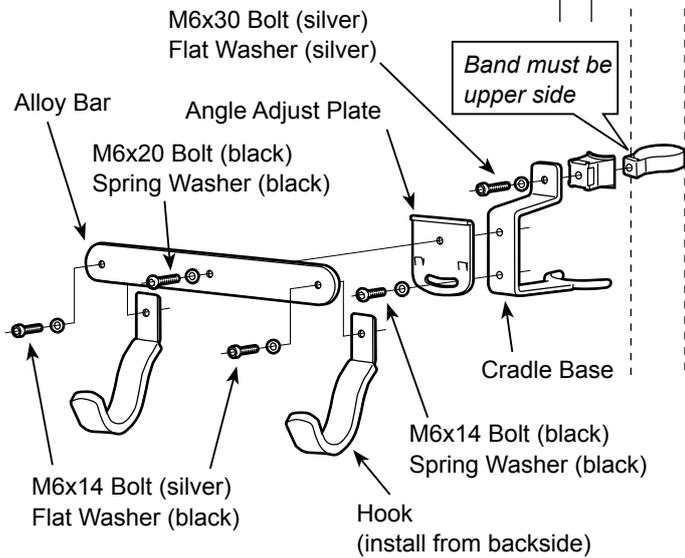


## For Stationary Trainer

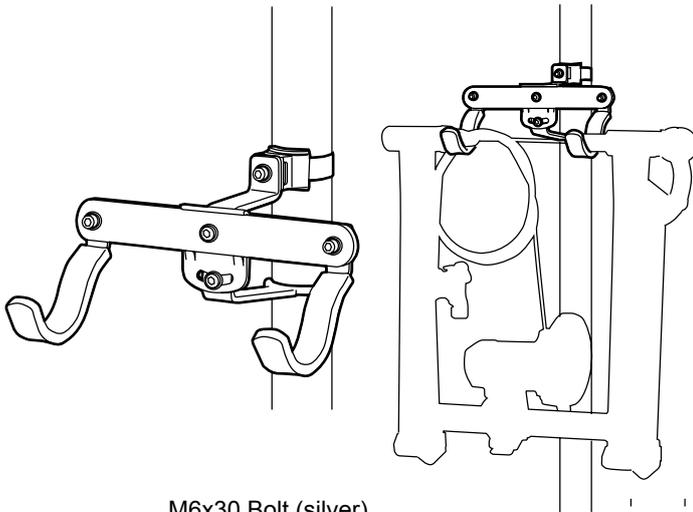


## For Rollers

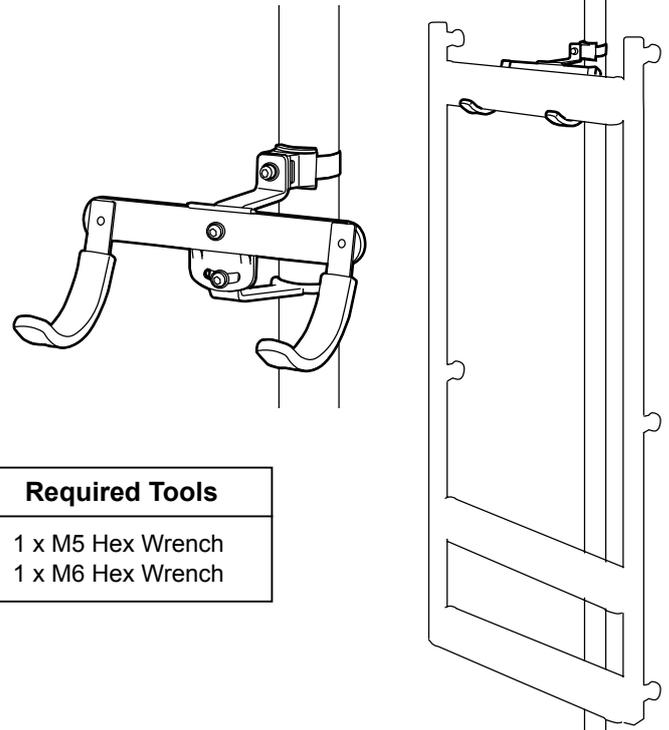

### Required Tools

- 1 x M5 Hex Wrench
- 1 x M6 Hex Wrench

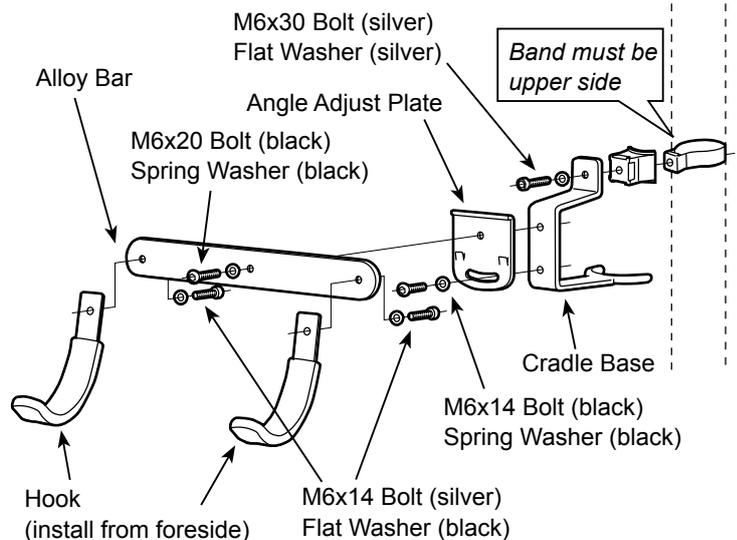

## How To Assemble Band Clip

Follow the steps to install the Stainless Band Clip;

- 1) Disassemble the band clip.
- 2) Open the band and wind the pillar.
- 3) Overlap the band ends as the welded nut is located inner side. (see Fig. B)

If the nut side band end has been in wrong angle, adjust the angle.


- 4) Put the Plastic Bracket onto the band.
- 5) Insert M6x30 Bolt with Flat Washer to the upper hole on Cradle Base, and tighten to the center hole on Plastic Bracket gently.
- 6) After adjusting the height and angle of the attachment, tighten the bolt firmly.



**The band ends must be overlapped completely. If the nut side has been bent in wrong angle, you cannot tighten the bolt properly. Be sure the nut is located in the right angle (90 degrees) to the bolt line. (see Fig. C)**



**Do not push the bolt when tightening. The stainless band is so thin that it easily becomes bent and you cannot tighten the bolt.**

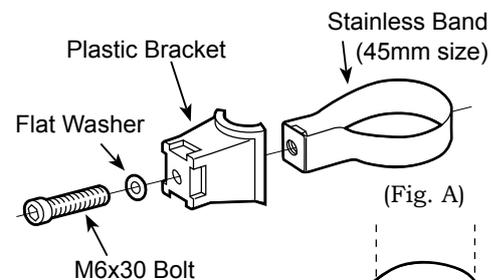

M6x30 Bolt

Flat Washer


Plastic Bracket

Stainless Band (45mm size)

(Fig. A)

Overlap both band ends

(Fig. B)

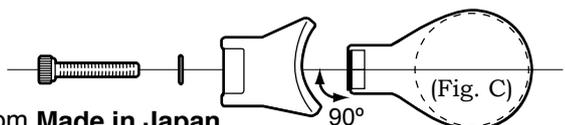

(Fig. C)